

# **LABEL PRINTER** **LABELWORKS PX LW-PX700**

**EPSON®**  
EXCEED YOUR VISION



**THE FASTER, SMARTER  
EASIER & BETTER  
LABEL PRINTER**

Professionals prefer LABELWORKS PX and the LW-PX700 — a portable label and wire marker printer with exclusive time- and cost-saving features for creating custom and compliant labels up to 1" (24 mm) wide. Organize tool cribs, identify storage bins, make safety labels, mark cables and wires, tag assets and more. With application-specific hot keys, this easy-to-use label maker offers extraordinary flexibility. Import images and print on the go — the LW-PX700 features Mixed-Length printing for variable length labels on a single half-cut strip and Pick-and-Print for faster print-and-apply in the field. With LABELWORKS PX innovative rollback technology, there's less lead margin waste as compared to other brands.

**LIFETIME  
WARRANTY**



**ENGINEERED FOR INDUSTRY**

## **FASTER**

Application-specific hot keys cut data entry time. With Mixed-Length printing, users can create multiple variable-length labels on the same strip with a half-cut between each label.

## **SMARTER**

Import and print large batch files from Excel® with easy-to-use Label Editor Professional software. Includes large built-in memory — Create or import up to 100 label designs and custom images.

## **EASIER & BETTER**

Minimize tape waste with shorter lead margin of up to 4mm. With Pick-and-Print, the printer prints, cuts and holds a single label until it is removed. The printer then resumes the process for the next label in a series.



# LABEL PRINTER

## LABELWORKS PX LW-PX700

Catered to meet demanding industrial standards, the LW-PX700 is able to satisfy a wide array of needs by conforming to their application-specific requirements through the diverse range of label tapes that Epson offers.



### FASTER

Print speeds of up to 35mm/sec at 360 dpi resolution will allow for a quick turnaround time with exceptional print quality. Engineered for increased productivity with its intuitive half-cut, pick-and-print and drop-stop features, you can peel individual labels as they print or commit to continuous printing.

- Specialty print modes — Application-specific hot keys simplify wire marking and industrial applications
- Pick-and-Print — With Pick-and-Print, the printer prints, cuts and holds a single label until it is removed. The printer then resumes the process for the next label in a series.
- Auto full/half-cut — Create strips of uniform or mixed-length labels for ease of printing and application in the field
- Mixed-Length Printing — Using the Mixed-Length hot key, users can create multiple variable-length labels on the same strip with a half-cut between each label.



### SMARTER

- Amazing power — Import and print large batch files from Excel® with easy-to-use Label Editor Professional software
- Large built-in memory — Create or import up to 100 label designs and custom images
- Import/store up to 100 custom labels and images



# LABEL PRINTER

## LABELWORKS PX LW-PX700

### EASIER (Engineered for Ease)

#### Intuitive Ergonomic Design

Configure your printouts quicker, with more efficiency through conveniently located short-cut keys to configure your printouts. Experience convenience through the ease of tape cartridge replacement from a front opening and the magnetic mounting capability.

- Easy to carry — The only portable printer with a built-in handle makes it easy to use anywhere.
- Hands-free operation — Magnet attachments keep the printer within reach to free up your hands and get the job done.



### BETTER

Minimize tape wastage and maximize cost-savings with a large backlit screen to preview printouts. Get more out of each roll of label tape with print margins as low as 4mm\* through the auto tape rewind function that retracts excess tape. Epson's labels allow lasting longevity and contribute to more cost-savings by eliminating the need for constant replacement.

- Less waste and cost — Innovative rollback technology reduces lead margins to 4 mm\*, which translates to less cost and waste per print
- 4 mm Lead Margin — Featuring innovative rollback technology, the LW-PX700 retracts material into the cartridge before the first label prints, reducing the lead margin to 4 mm.




(for standard industrial tapes)

### Ultimate Versatility with Epson Label Editor Professional Software

The LW-PX700 comes bundled with the Epson Label Editor software for a more customizable experience. The software comes with more than 70 pre-installed templates to create custom labels and also allows more customization of labels with its capability to import images and barcodes.


- 898 symbols, serialization, 15 bar codes including QR (55 characters)

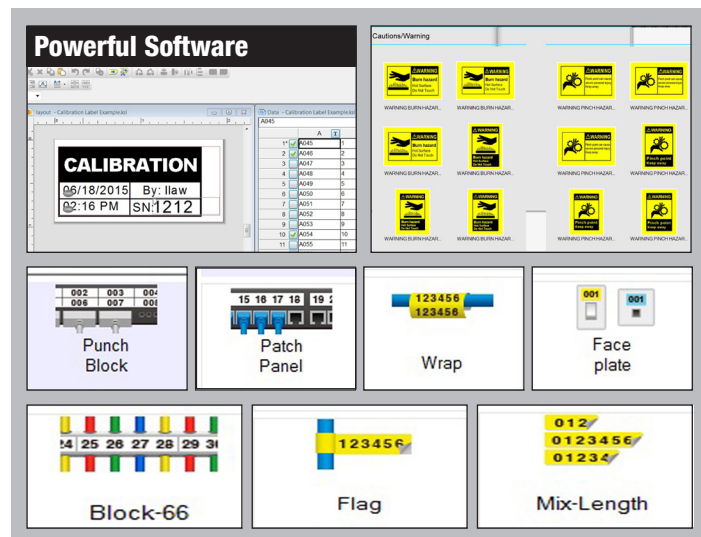

### ASSORTED VARIETY OF TAPES

To complement the LW-PX700, Epson offers an assorted variety of high-quality labels in a diverse range of style, size and colors to let you create application-specific labels to accommodate your needs. Tape widths range from 4mm to up to 24mm. Taking industrial applications into consideration, Epson's comprehensive list offers cable-wrap, heat shrink tapes, and magnetic tapes.

- Specialty labels — Heat shrink tube, magnetic tape, self-laminated and strong adhesive simplify and diversify supply selection for industrial applications in the facility or field (specialty labels sold separately).
- The professional choice — LW-PX700 prints industrial labels and wire markers from 1/8" (4 mm) to 1" (24 mm) wide supplies.

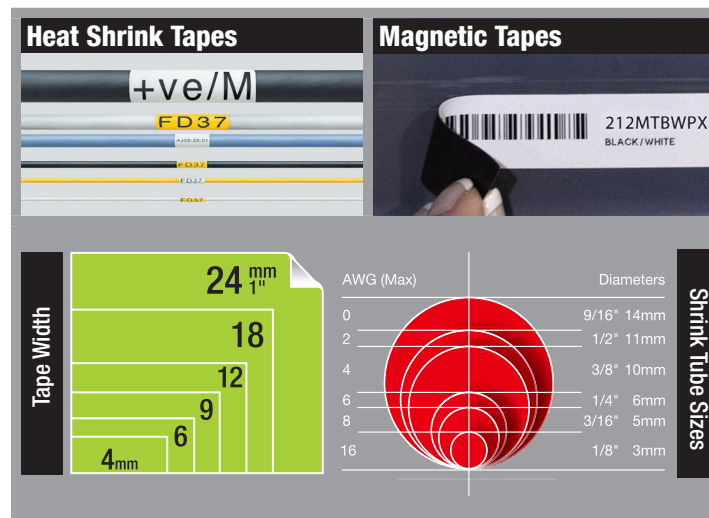

\*On all standard PX industrial tapes and some heat shrink tube widths; lead margin may vary with specialty materials.



# LABEL PRINTER

## LABELWORKS PX LW-PX700

**EPSON®**  
EXCEED YOUR VISION

Model Number	LW-PX700
<b>PRINTER</b>	
Certifications	Energy Star
Weight(g)	"1,110 w/o battery"
Size	136mm x 298mm x 90mm (5.4" x 11.8" x 3")
LCD	"Monochrome, 16 character x 4 line, 140 x 80 dot "
Backlight	Yes
Keyboard Type	QWERTY
Hot Keys (alternate function)	General ID (none), Punch Block (none), Patch Panel (Block-66), Wire Wrap (Wire Flag), Face Plate (Mixed-Length Strip)
Power Supply	"6AA/Rechargeable Battery/AC adaptor"
LED (Battery Charge Indicator)	Yes
File Download	Yes
BMP download	Yes
Max Print Speed	30mm/sec(AC/ Li-ion battery)
Cutter	AUTO/ HALF
Menu Prompt Languages	English, French, Spanish, German, Italian, Dutch, Portuguese, Swedish, Finnish, Norwegian, Danish, Turkish
Cartridge Loading	Front
Tape Width	4-24mm (1/6" - 1")
Die-cut Supplies	No
Max HST width	14.3 mm
Printer head width	18.1 mm
Printing resolution(dpi)	180 dpi
Date/Time Stamp	No
External memory	No
Wi-Fi / Bluetooth	No
<b>SOFTWARE</b>	
Support OS	Win
PC Software	Label Editor Professional
Interface	USB
<b>FEATURES</b>	
Warranty	LIFETIME
Mixed-Length Label Strip with Half-Cut	Yes
Pick-and-Print Hands-Free Label Printing	Yes
Label Preview	Yes
Tape End Detection	Yes
Tape Type Detection	Yes: Label (3bit+8bit)
"Auto Tape Rewind (For shortening label margin)"	Yes
Industrial Symbols (898 pre-loaded)	ANSI, Arc Flash, Arrows, A/V, Datacom, Telecomm, Fire, GHS, Laboratory, Office, PPE, Warning, Chevron Pattern
Bar Codes (9 pre-loaded)	EAN-8, EAN-13, CODE128, CODE39, QR CODE, ITF, CODABAR, UPC-A, UPC-E
<b>PACKAGE INCLUDES</b>	
Label Editor Professional Software	LW-PX700PC; LW-PX700PCD
User Manual	Yes
Magnet Attachment	LW-PX700PCD
Rechargeable Battery	LW-PX700PCD
Hard Carrying Case	LW-PX700PCD
AC Adaptor	Yes
USB Cable	LW-PX700PC; LW-PX700PCD
Tape Cartridge	Yes (212BWPX)
<b>Additional / Replacement Items Available for Purchase</b>	Rechargeable Battery, Magnet attachment, Label Editor Professional Software, Carrying case

Information correct as of December, 2017

### LW-PX700



### LW-PX700PC



#### LW-PX700PC Kit Includes:

- LW-PX700 printer
- AC Adapter
- 212BWPX tape cartridge
- Label Editor Pro software CD
- USB cable
- Owner's manual

### LW-PX700PCD



#### LW-PX700PCD Kit Includes:

- LW-PX700 printer
- AC Adapter
- 212BWPX tape cartridge
- Li-Ion battery
- Label Editor Pro software CD
- USB cable
- Magnet attachments
- Owner's manual
- Industrial carrying case

© 2017 Epson LABELWORKS PX. All Rights Reserved. Reproduction in part or in whole, without the written permission from Epson, is strictly prohibited. EPSON and EXCEED YOUR VISION are registered trademarks of Seiko Epson Corporation. All other products names and other company names used herein are for identification purposes only and are the trademarks or registered trademarks of their respective owners. Epson disclaims any and all rights in those marks. Print samples shown are simulations only. Specifications and product availability are subject to change without notice and may vary between countries. Please check with local Epson offices for more information.