

Fixed systems for gas and fire monitoring you can trust

# **Gasmonitor** Plus



## **Gasmonitor** Plus

Gasmonitor Plus is our flexible microprocessor controlled system designed with a modular approach, so you get exactly what you want.

Used throughout the world, both on and offshore, Gasmonitor Plus provides the cost effective solution to your system requirements.

Gasmonitor Plus, the gas and fire control system you can trust.

#### Simple to use

Gasmonitor Plus offers flexibility whilst still offering simple operation. All the day to day functions are accessible via push buttons on the front panel.

As well as a rolling display, indicating the channel currently monitored, each channel has a bar graph display. This unique bar graph format is ranged to indicate readings below the first alarm setting, providing an instantaneous representation of the gas concentration on every detector.

Common alarm LEDs on the display card and individual alarms on the panel only light when a hazard or fault is detected. This means **the whole** rack status can be checked at a glance.

## **Flexible architecture**

Each channel has **three levels of alarm** as well as a **dedicated analogue output**, set as 4-20 mA as standard.

Optional relay modules can interface to the panel to provide up to a total of 84 output relays per rack. Sixteen of these relays can be configured/ voted from a combination of the three levels of alarm per channel.

The RS232 digital interface provides connectivity with Crowcon's suite of custom designed PC software. Each rack is uniquely addressable, making multi-drop architectures possible. This cuts down on configuration and monitoring cabling.

## **Ground breaking design**

Gasmonitor Plus is a microprocessor based expandable control system, which **can be multiplied to offer unlimited channels and outputs.** 

Its modular construction provides ultimate customisation capacity with minimal wiring.

Gasmonitor Plus has industry standard analogue outputs, and the mechanical design is based on 19" Eurorack. This means that the **Gasmonitor Plus** will integrate fully with existing rack mounted protection systems on site.

The alochrome finish and rack screening plates ensure that the Gasmonitor Plus is impervious to radio frequency interferance.


### **Easy maintenance**

Gasmonitor Plus has been designed with easy servicing and maintenance in mind.

Each channel is inhibited separately so that plant safety is not compromised during maintenance checks.

Routine calibration can be achieved from the front panel. The one man calibration feature reduces the service overhead by half.

One universal gas card architecture controls all gas detectors. This **reduces the spares holding** required for Gasmonitor Plus maintenance. **Each control card is fitted with its own dedicated micro-controller so it can function independently** in the event of a single point failure.

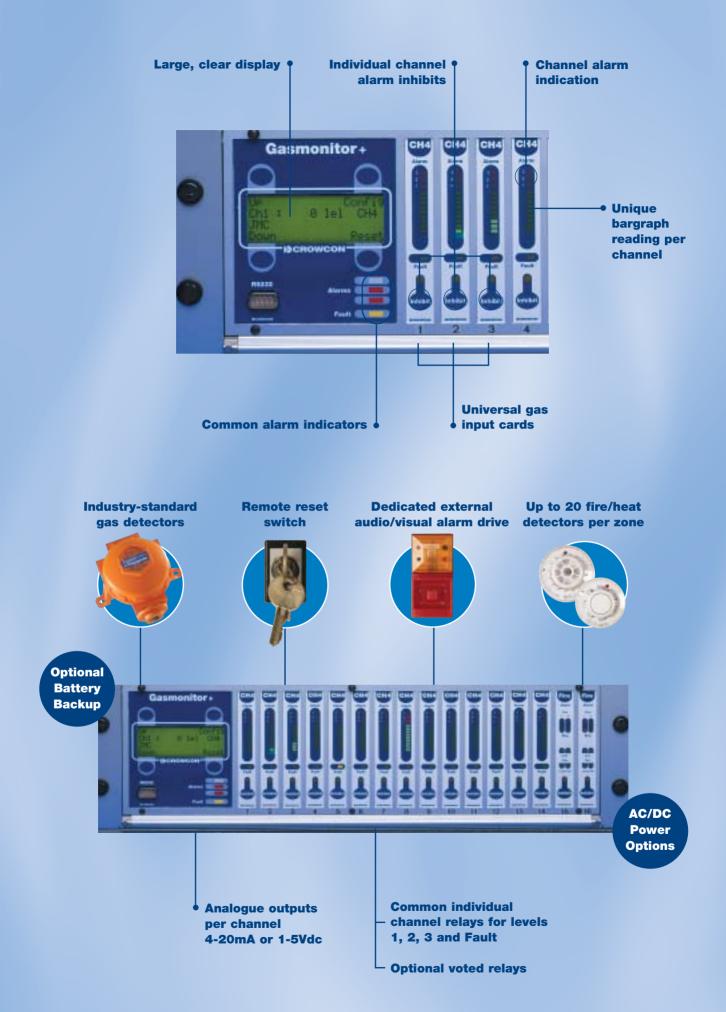



Gasmonitor Plus		
Size		483 x 133 x 294 mm (19.0 x 5.25 x 11.5 ins)
Weight		9.5 kg (21 lbs)
Enclosure material		Aluminium alloy
Mounting		Rack mounted (3u format) <sup>1</sup>
Channels		16 per rack
Inputs	Gas	2 or 3 wire, 4-20 mA (sink or source), or mV bridge
	Fire - Smoke detectors, heat detectors and manual call points, up to 20 per loop	maximum of 32 loops per rack (i.e. 16 twin zone fire modules)
Outputs	Analogue	16 x 4-20mA, max. load 960 Ohms or 1-5 V, min. load 100 Ohms
	External audio/visual alarm drive	Powered 24 V dc, max load up to 2 A for each alarm level
Relays	Туре	Up to 84 DPCO contacts rated 5 A @ 250 V ac, non-inductive load
	Assignment - common - per channel - voting Relay modes	Alarm 1, Alarm 2, Alarm 3, Fault Gas alarms 1, 2 & 3, fire & fault Up to 16, configurable energised, de-energised & latching, non-latching
Digital Communications	DCS/PLC/PC/Local configuration link	RS232
Logging		Built-in datalogger - data available via communication links
Panel indication	Channel number Gas reading Measurement units System fault	4 lines x 20 characters back-lit LCD display as above plus green LED bar-graph ppm, %LEL, %vol, fire yellow LED
Alarm indication	Audible-internal sounder Visual - alarm - fault - inhibit	• 3 individual & 3 common alarms (red LED) individual & common fault (yellow LED) individual inhibit (yellow LED)
Power	AC mains DC Battery backup	100 - 260 V ac 50/60 Hz external 27.6 V dc, 150 W or 300 W External
Remote Accept/Reset		•
Lamp test		•
Approvals	Low voltage directive RF immunity RF emissions	Meets BS EN 61010-1 Meets EN 50082-1 Meets EN 50081-1
Operating Temperature		0 to +50°C (32 to 122°F)
Humidity	0 - 95% non-condensing	•

1. Wall mounted and floor standing cabinets are optional, dimensions on request,



UK Office Crowcon Detection Instruments Ltd 2 Blacklands Way Abingdon Business Park Abingdon Oxfordshire OX14 1DY United Kingdom United Kingdom Tel: +44 (0) 1235 557700 Fax: +44 (0) 1235 557749 Email: crowcon@crowcon.com Web Site: www.crowcon.com

USA Office Crowcon Detection Instruments Ltd 21 Kenton Lands Road

21 Kenton Lands Road Erlanger Kentucky 41018-1845 USA Tel: +1 859 957 1039 or 1-800-5-CROWCON Fax: +1 859 957 1044 Email: salesusa@crowcon.com Web Site: www.crowcon.com

Rotterdam Office Crowcon Detection Instruments Ltd Vlambloem 129 3068JG, Rotterdam Netherlands Tel: +31 10 421 1232 Fax: +31 10 421 0542 Email: eu@crowcon.com Web Site: www.comcom Web Site: www.crowcon.com

P05003 Issue 6 05/06

Singapore Office Crowcon Detection Instruments Ltd Block 192 Pandan Loop #05-01 Pantech Industrial Complex Singapore 128381 Tel: +65 6745 2936 Fax: +65 6745 0467 Email: sales@crowcon.com.sg Web Site: www.crowcon.com Web Site: www.crowcon.com

Crowcon reserves the right to change the design or specification of this product without notice