

Fixed systems for gas and fire monitoring you can trust

Vortex





Vortex is the powerful package that has flexibility built-in.

With up to 12 channels of gas including up to 3 of fire, Vortex can be customised to meet your site requirements, however complex, without the need for extensive cabling.

All this and it is simplicity itself to operate and maintain.

Simple to use

Vortex offers all the flexibility you will need while still being simple to operate. All the day to day operations can be completed via push buttons on the front panel.

The display panel shows the fault and alarm levels for all the channels but the LEDs only light when a hazard or fault is detected. Thus **the whole system can be checked at a glance.**

Even when there is a need to change the alarm or channel settings all of these **adjustments can be made at the enclosure** without the need for additional equipment.

Robust & reliable

You can rely on Vortex because it has been tested to the highest environmental standards. It is rated IP65 for dust and water ingress.

Not only does it meet all the current legislation, but it also has been designed to meet the new tough gas detection EMC standards.

For your safety all the relays are monitored continuously so faults are identified immediately ensuring the system is always fully functional.

Power failures are not a problem as Vortex has its own **internal battery back-up** which is monitored continuously for connection integrity and charge levels.

In short no matter how tough the conditions Vortex will protect you.

Ultimate flexibility

Vortex can be configured to match all of your site requirements, whatever they may be, with an absolute minimum of wiring.

Each channel has 1 fault and 3 levels of alarm which can be combined in any pattern: voting, to trigger up to a maximum of 32 output relays. In this way Vortex can be customised to protect your staff from any hazard that they may meet.

Customisation is easy too. It can be factory set to your requirements or altered at any time by a PC using the Vortex PC software. This allows extensive systems to be configured without the need for complex cabling.

Vortex uses industry standard communication links so it is simple to integrate it with your existing control systems.

Easy maintenance


Vortex has been specially designed to make servicing and maintenance simple and convenient.

The modular construction means that **replacement** parts simply plug in.

Space inside the enclosure has been maximised to improve access for cable termination so that cabling is easy.

Each zone can be inhibited separately to allow you to work on a specific area without affecting the rest of the system.

All adjustments are performed electronically thus the problems of drift from adjustable potentiometers has been removed **reducing maintenance to a minimum.**

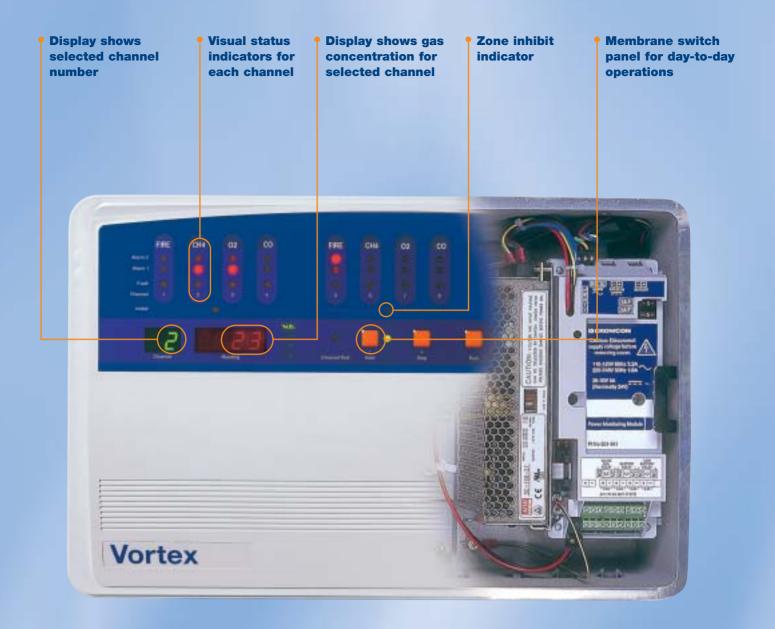




Vortex Flexibility

The standard wall mounted unit has now been joined by modular versions, designed for incorporation into a variety of specialist enclosures or larger cabinet-based safety systems.

The simplest version, which is suitable for use where a display panel is not required, comprises just the essential input, output and controller modules mounted on a DIN rail. This configuration is ideal for confined spaces and can be installed in specialist enclosures, such as flameproof housings or those with high ingress protection.

Vortex rack

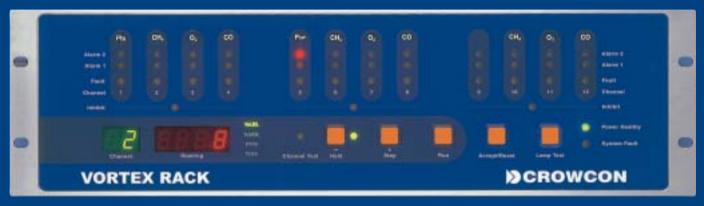

Vortex rack combines the essential modules with a 19" Euro rack fascia featuring simple button controls and visual status indicators. Designed for integration into existing Euro rack enclosures, this configuration can be used to replace obsolete gas monitoring systems or to introduce gas detection to other types of rack-mounted equipment.


Vortex panel

Vortex Panel is designed for flush mounting in a door or panel in non-Euro enclosures and allows gas detection to be added to almost any OEM monitoring system.

The self adhesive display will seal the panel to an Ingress Protection rating of IP65, which means that this version is ideal for wetter, dustier environments.





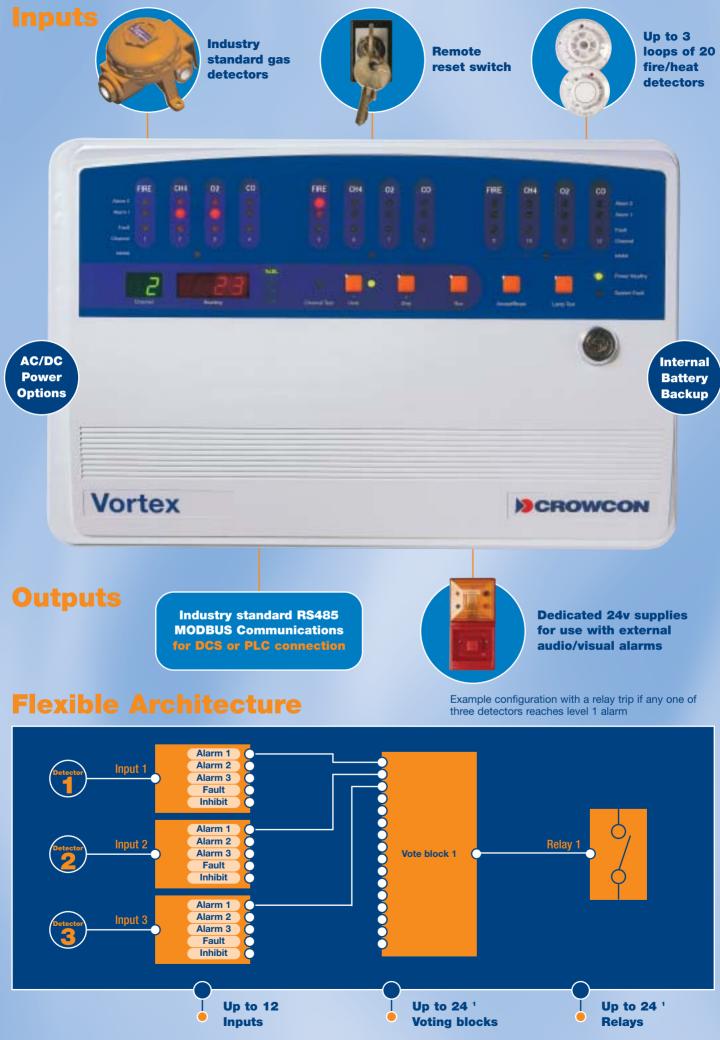





Vortex		
Size		470 x 306 x 170 mm (18.5 x 12 x 6.5 ins)
Weight		12 kg (27 lbs)
Enclosure material		Aluminium & Plastic
Mounting		Wall mounted
Ingress protection		IP65
Channels		Up to 12
Inputs	Gas	2 or 3 wire, 4-20 mA (sink or source), 0-5 V
	Fire - Smoke detectors, heat detectors and manual call points, up to 20 per loop	maximum of 3 loops
Outputs	Analogue	None
	External audio/visual alarm drive	4 powered 24 V dc, max load up to 0.5 A each
Relays	Туре	Up to 24 SPCO contacts rated 6 A @ 250 V ac, non-inductive load Active coil failure monitoring
	Assignment - common - per channel - voting Relay modes	Mains fail, battery low, battery fail Up to 24, (32 if only 8 inputs required) configurable using all alarms, fault, and system events energised/de-energised latched/ non-latched Time delayed & pulsed
Digital Communications DCS/PLC/PC Local configuration link		Modbus or Profibus RS-485 multi-drop connection for monitoring, control and configuration Modbus using RS232 internal connector
Logging		Built-in event logger - data available via communication links
Panel indication	Channel number Gas reading Measurement units Power Battery OK Run/hold indication Channel test mode System fault – integrity watchdog	2 digit green 7-segment LED 4 digit red 7-segment LED ppm, %LEL, %vol, fire Greed LED on front panel Green LED Green LED activates on hold Flashing amber LED when activated Amber LED
Alarm indication	Audible-internal sounder Visual – alarm – fault – inhibit	Piezo Individual channel Alarm 1 and 2 (red LED) (amber LED) Zone inhibit (amber LED)
Power	AC mains DC Battery backup	110/120 V & 220/240 V switchable 50-60 Hz 20-30 V 2Ah Internal
Remote Accept/Reset		Available from terminals within the panel
Lamp test		Via button on front panel
Approvals	Low voltage directive EMC	Meets BS EN 61010-1 EN 50270
Operating Temperature		-10 to +40°C (14 to 104°F)
Humidity		0 - 95% non-condensing

Flexible Architectures: **OEM** Full functionality and maximum module capability with no display: a full 12 inputs and 32 outputs are available in OEM, Rack or Panel **RACK** Standard 19" 3u panel dimensions For Eurorack compatible enclosures. **PANEL** Panel cutout dimensions 366mm wide x 84.5mm high Cutout template provided Overlay label dimensions 441mm wide x 128mm high D



P05005 Issue 6 06/06

Sealed to IP65